 
 


WAVE Compact

 
 
PERAMOBATH

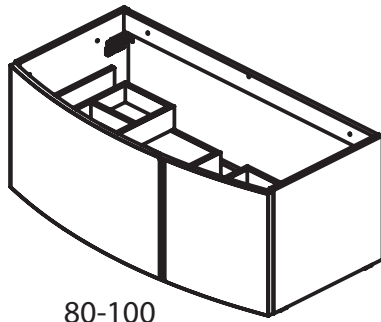

80-100

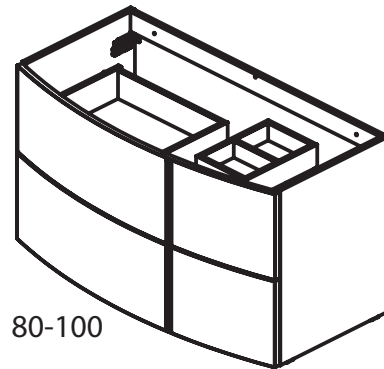

80-100

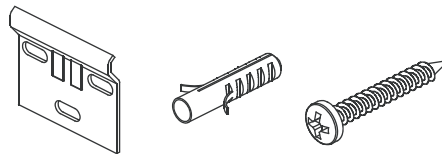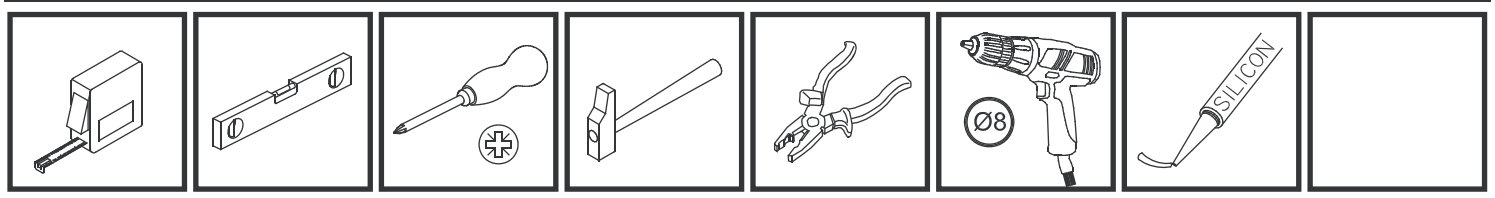


x2

x4

x4


BO-719

 01.

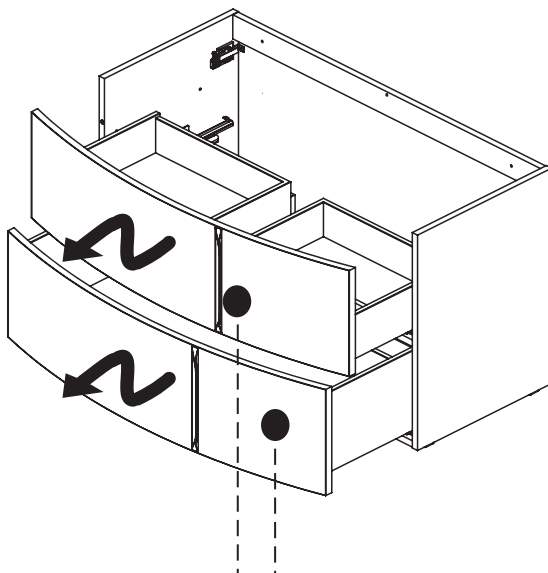


Tirar del cajón hacia el frente y ligeramente hacia arriba para extraerlo
In order to extract the drawer, pull it forward and softly upwards.
Sortir le tiroir en le soulevant légèrement vers le haut pour l'extraire du meuble.
Die Schublade nach vorne und leicht nach oben ziehen, um Sie zu entfernen.
Per tirare fuori il cassetto alzi il fronte e leggermente verso di su.


 
02.

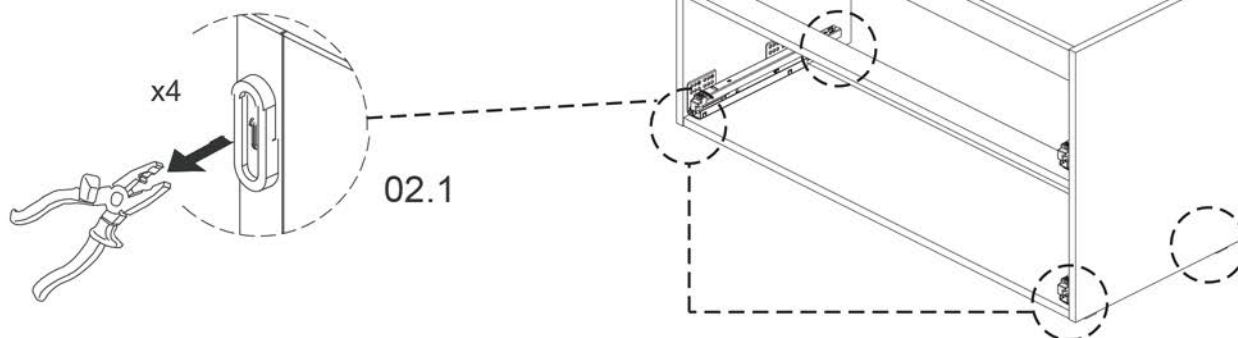


 
03.



cms.

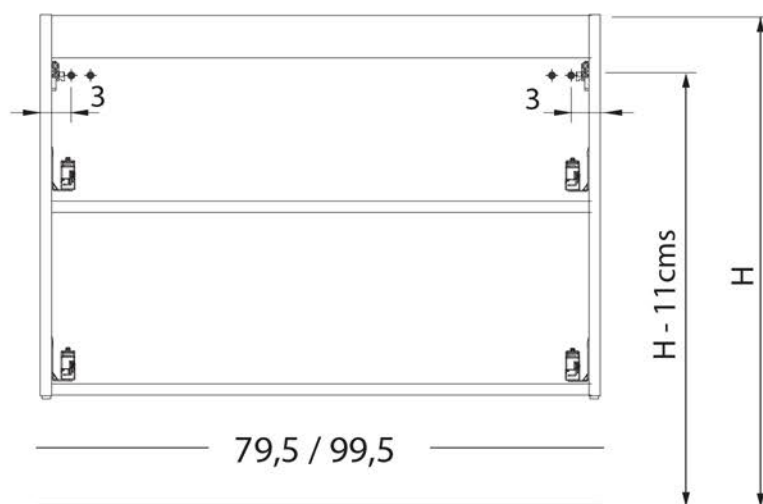  

  04.

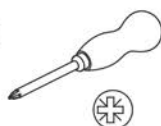

x2

 
 


x4




x4


BO-719

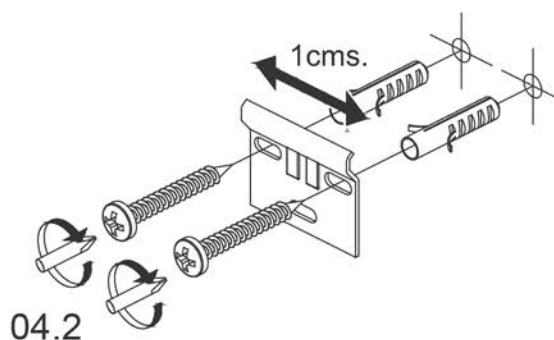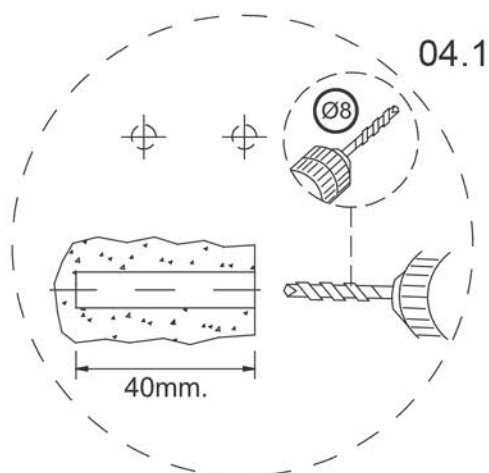

 
05.

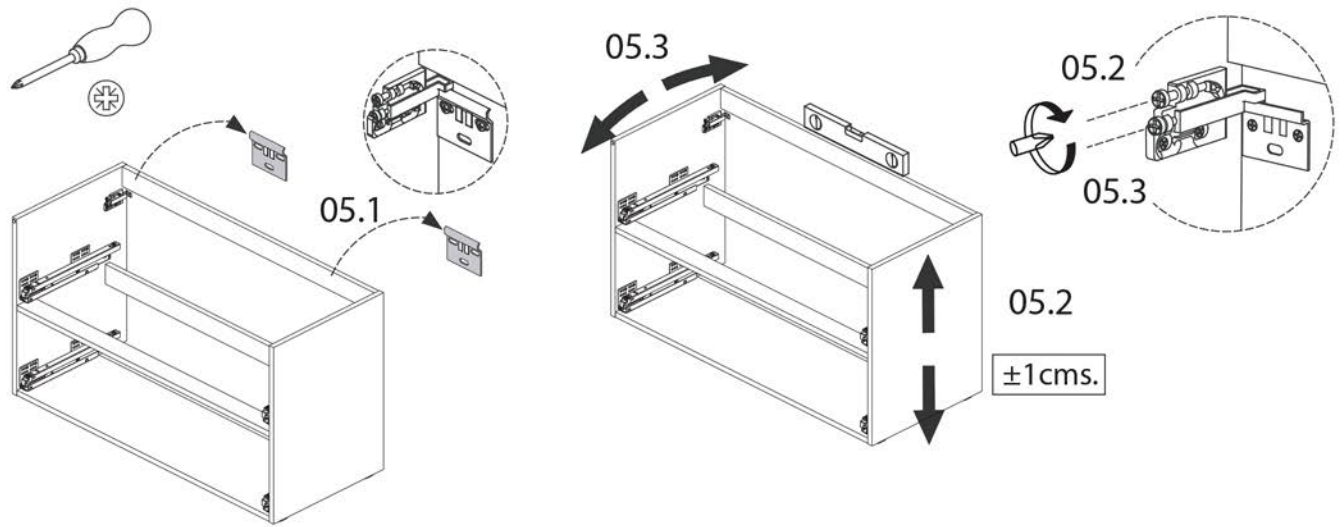


 
06.

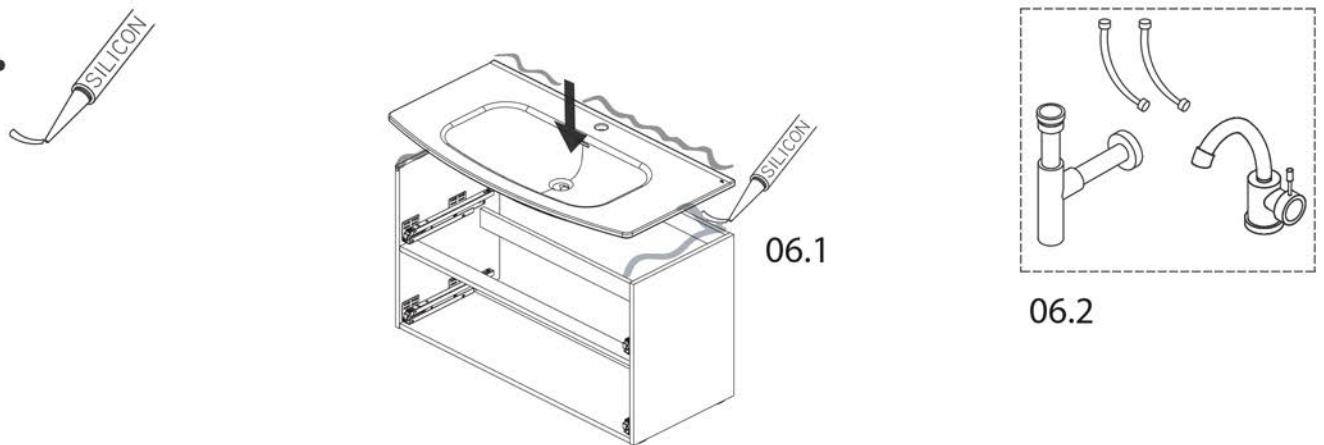



 
07.

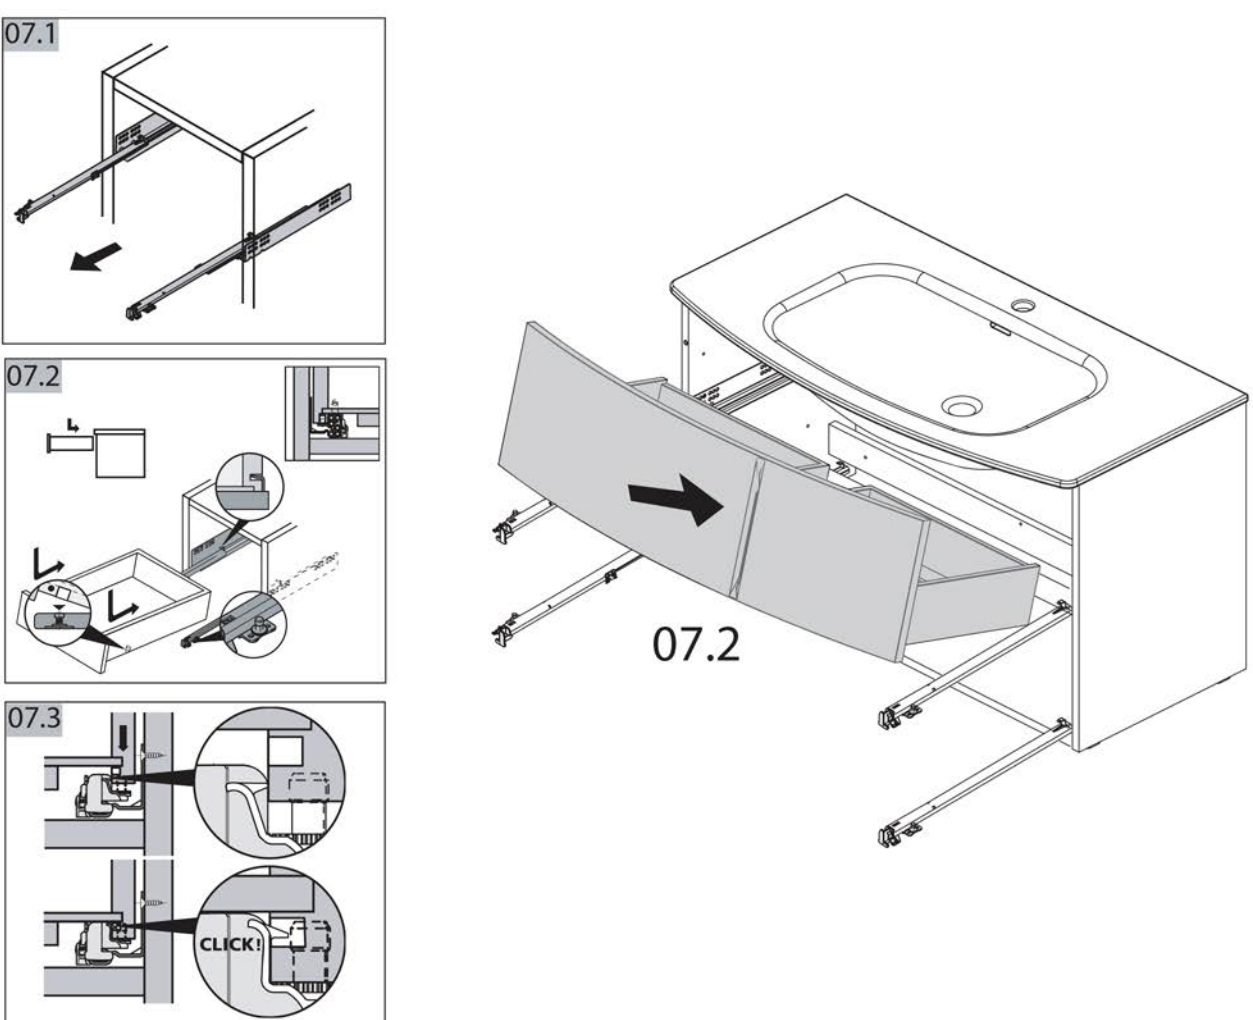

  08.


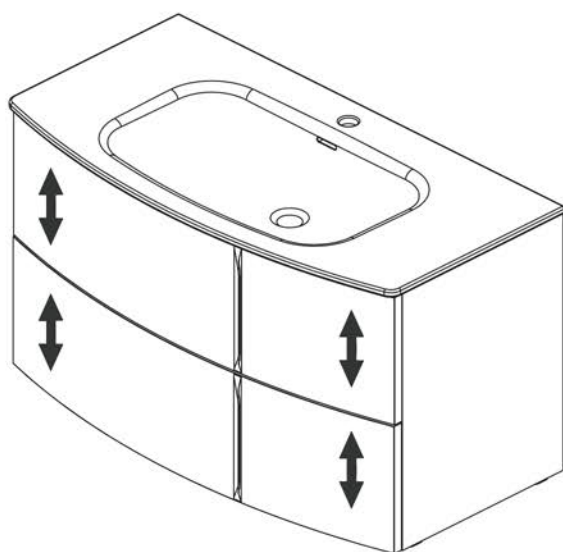
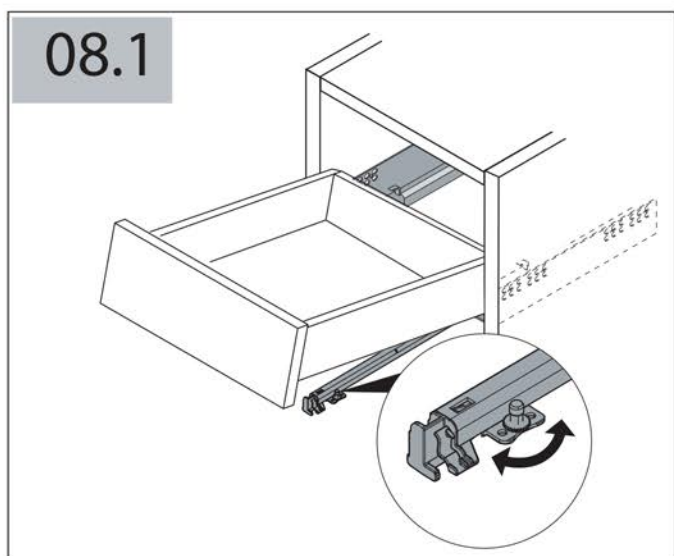


   09.

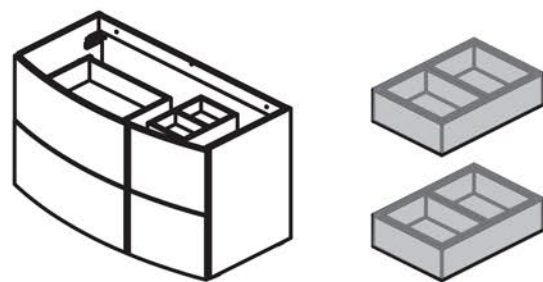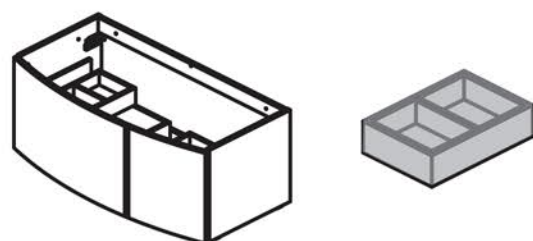
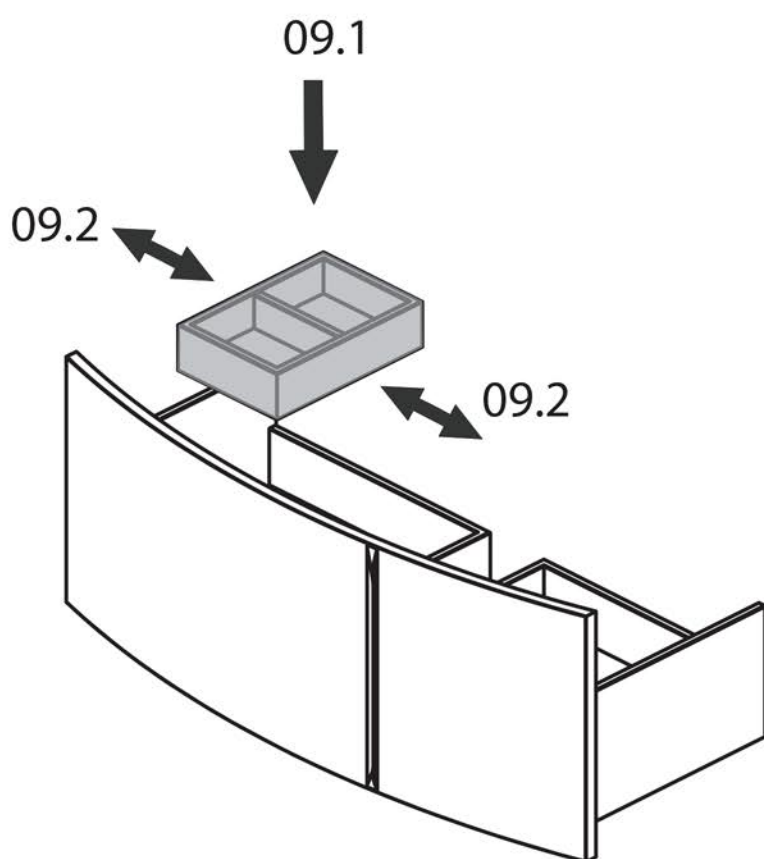


WAVE Compact

   
PERAMOBATH

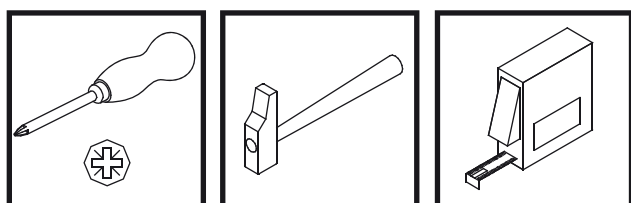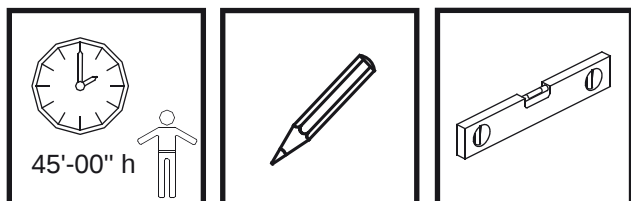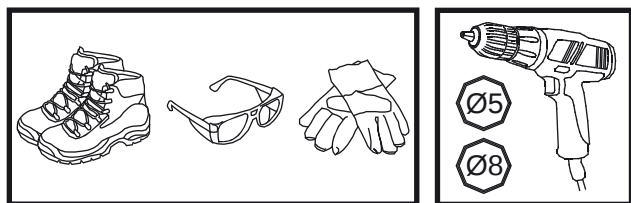


NON INCLUS / NOT INCLUDED

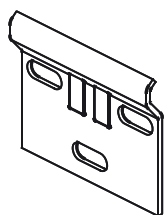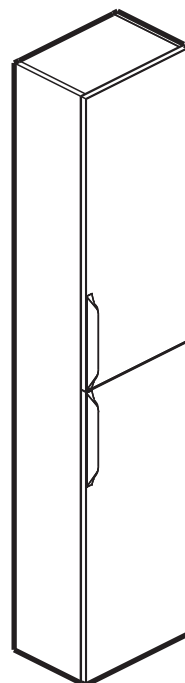  


x2

 

x4

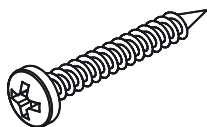 

x4

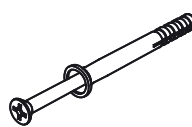 

x1



x1

 
 


x4


BO-850

BO-630



01.

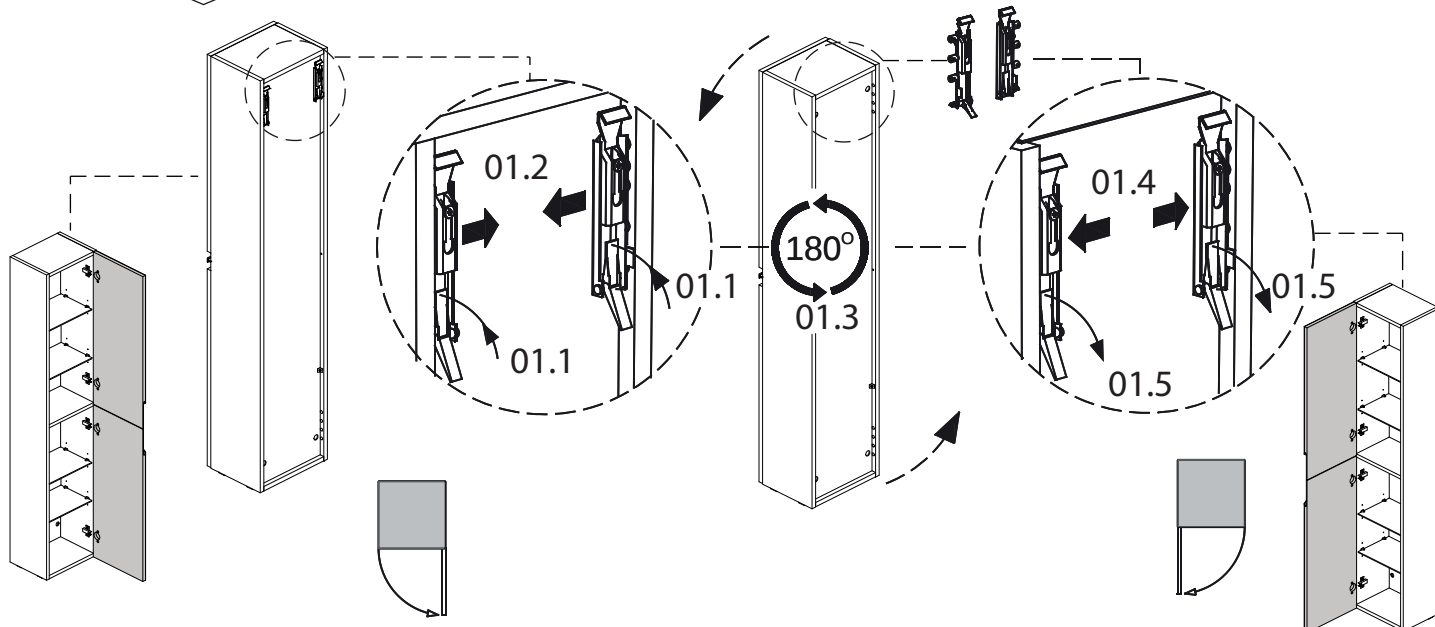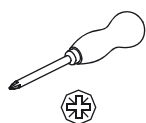

 
02.

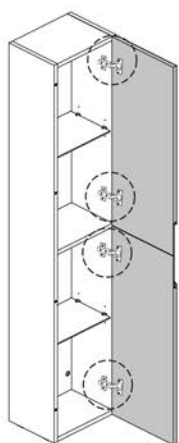

  
02.1

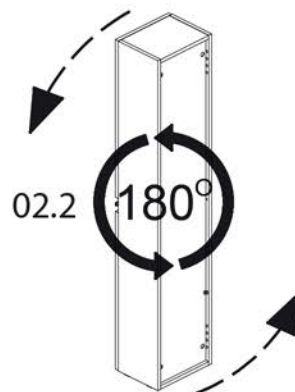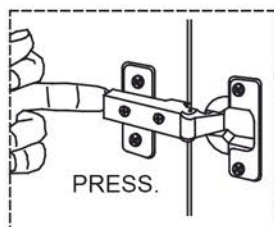

 
02.2

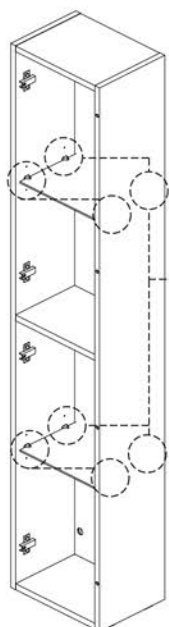

 
02.2

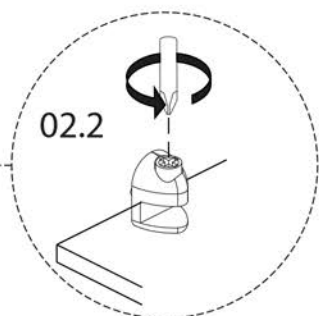

 02.3

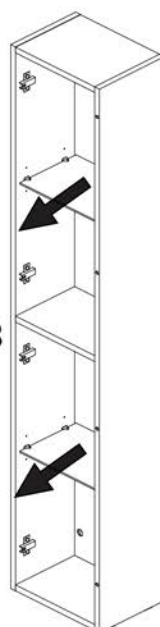


 02.4

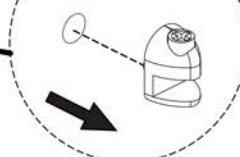


180°

 02.5

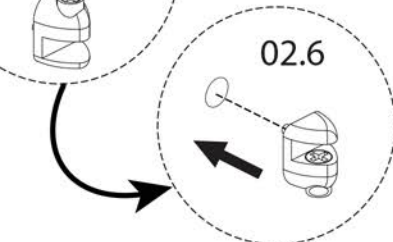


02.6


 
02.7

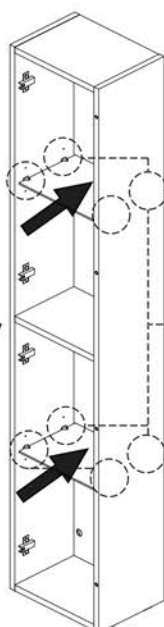

 02.8

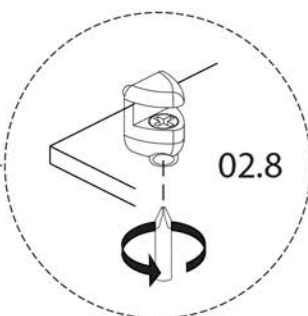




 
 
02.9

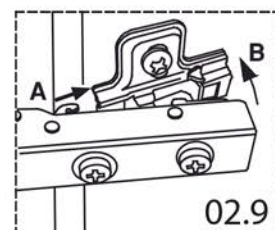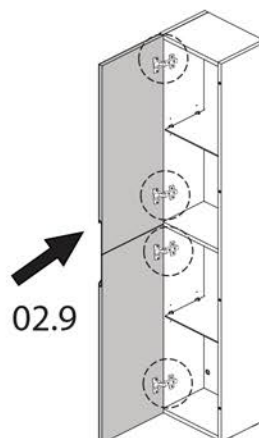

02.9



   
 
 
03.

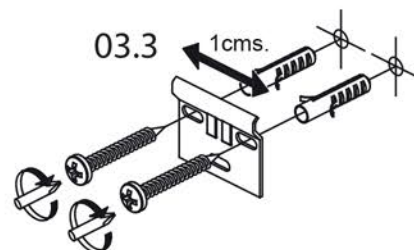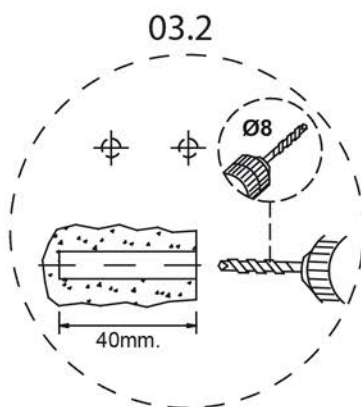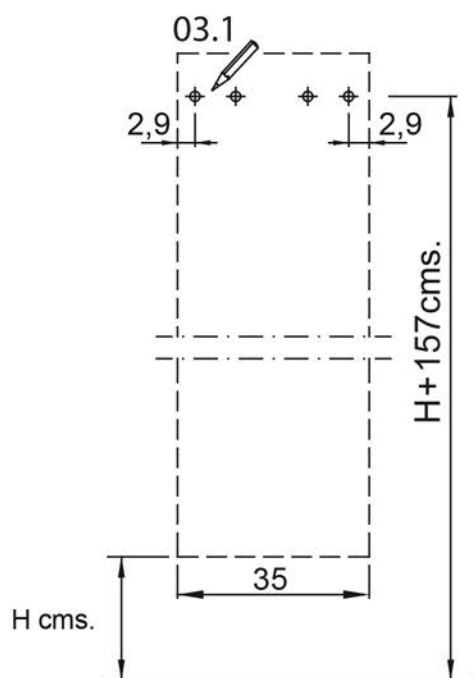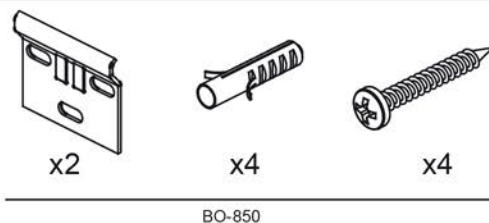


04.



   Ø4
X4

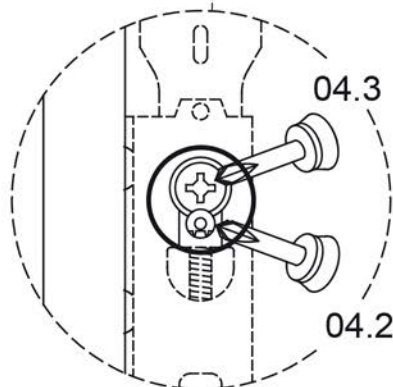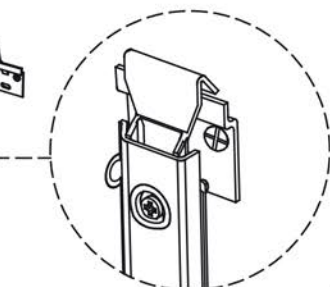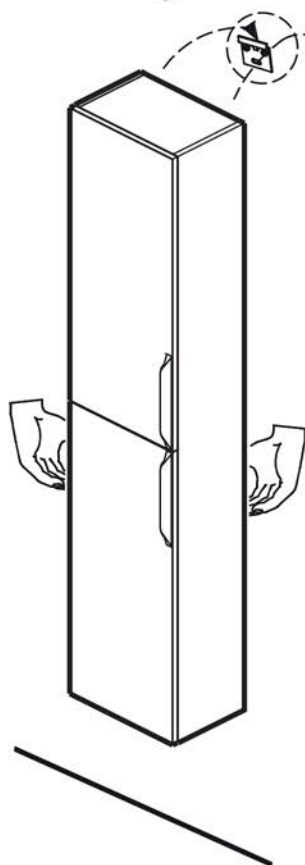





x4
04.4

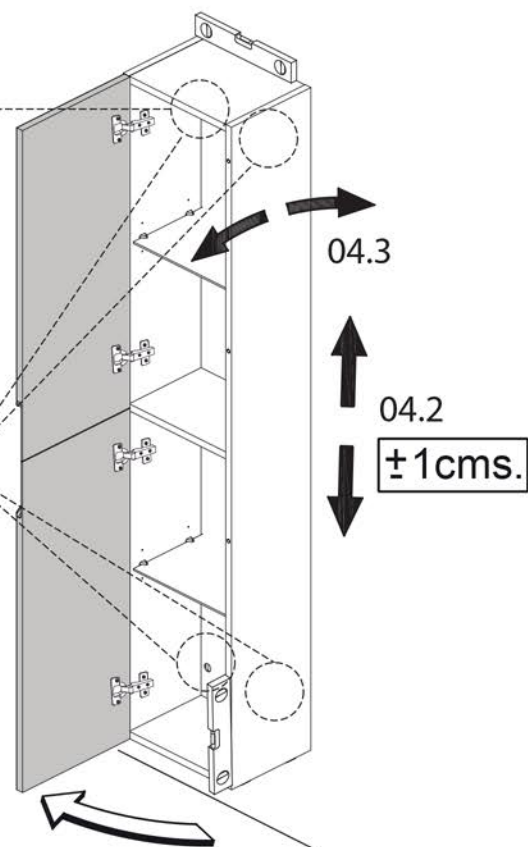 









05.



    BO-630

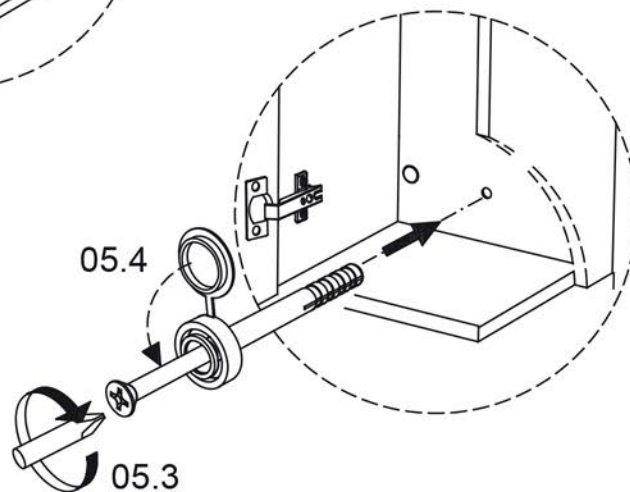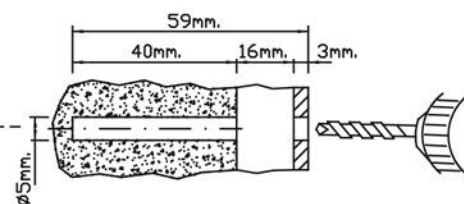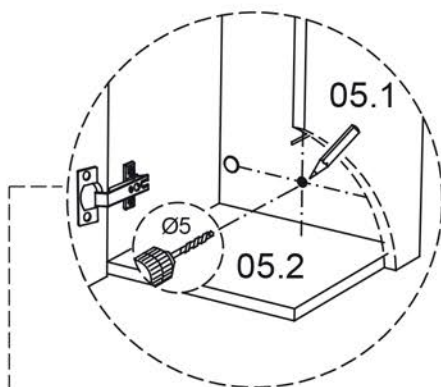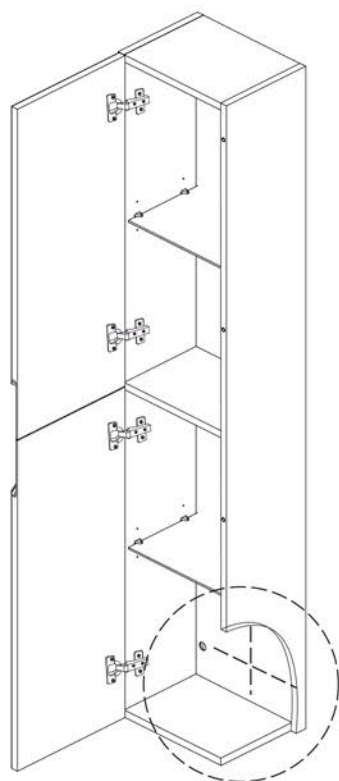

        06.

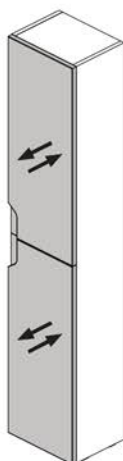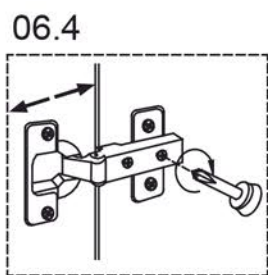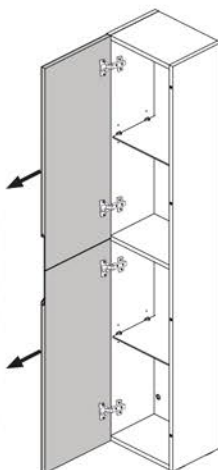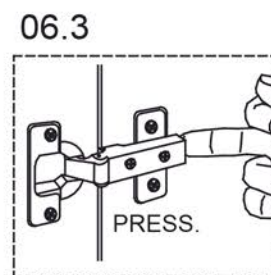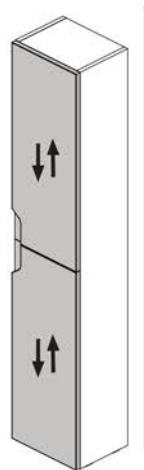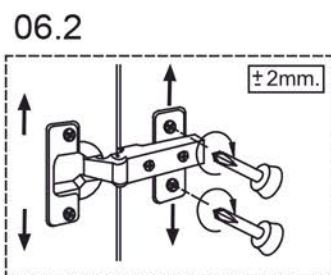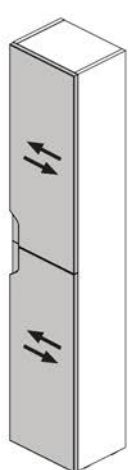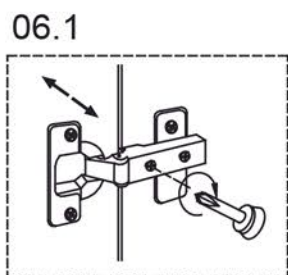

06.5

